Upgrade Notice in Specification

EN

Page 7	HDMI Input (digital)	High Definition Multimedia Interface Connects to devices with digitals signals and can be used with PC or HDTV video signals. HDTV support timing:1080P,1080i, 720P, 576P,576i, 480P and 480i.	
Page 20	Compatibility	SDTV/HDTV scanning format	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (for HDMI)

DE

Page 7	HDMI-Eingang (digital)	HDMI steht für High Definition Multimedia Interface (Hochauflösungs-Multimedia-Schnittstelle).Zum Anschließen mit Geräten mit Digitalsignalen, die auch mit PC- oder HDTV-Videosignalen benutzt werden können. Der HDTV unterstützt die folgenden Zeitmesser: 1080P, 1080i, 720P, 576P, 576i, 480P und 480i.	
Page 20	Kompatibilität	SDTV/HDTV Abtastformat	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (für HDMI)

FR

Page 7	Entrée HDMI (numérique)	High Definition Multimedia Interface Se connecte à des appareils avec des signaux numériques et peut être utilisé avec des signaux vidéo PC ou HDTV. Fréquences HDTV prises en charge : 1080P, 1080i,720P, 576P, 576i, 480P et 480i.	
Page 20	Compatibilité	Format de balayage SDTV/HDTV	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (for HDMI)

NL

Page 7	HDMI-ingang (digitaal)	Hoge definitie Multimedia-interface Hoge definitie Multimedia-interface Verbindt met toestellen met digitale signalen en kan gebruikt worden met computer of HDTV video signalen. HDTV ondersteunt timing: 1080P, 1080i, 720P, 576P, 576i, 480P en 480i.	
Page 20	Compatibiliteit	SDTV/HDTV scanindeling	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (voor HDMI)

DK

Page 7	HDMI-input (digital)	High Definition Multimediainterface Tilsluttes til udstyr med digital signaler og kan bruges til PC eller HDTV signaler. HDTV undersøtter timing: 1080P, 1080i, 720P, 576P, 576i, 480P og 480i.	
Page 20	Kompatibilitet	SDTV/HDTV-scanningsformat	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (til HDMI)

Upgrade Notice in Specification

SE

Page 7	HDMI-ingång (digital)	High Definition Multimedia Interface Ansluts till digital signalutrustning och kan användas med persondator eller HDTV-videosignaler i läge 1080P, 1080i, 720P, 576i, 576P, 480P och 480i med HDTV.	
Page 20	Kompatibilitet	SDTV/HDTV avsökningsformat	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (for HDMI)

NO

Page 7	HDMI-inngang (digital)	HDMI (High Definition Multimedia Interface) Forbindes til utstyr med digitale signaler, og kan brukes med PC eller HDTV video signaler. HDTV støtter timing: 1080P, 1080i, 720P, 576P, 576i, 480P og 480i.	
Page 20	SDTV/HDTV avsøkingsformat	SDTV/HDTV avsøkingsformat	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (for HDMI)

FI

Page 7	HDMI-tulo (digitaalinen)	DMI-liitännällä (High Definition Multimedia Interface) Kytketään laitteisiin, joissa on digitaalinen signaali ja voidaan käyttää tietokoneiden tai HDTV-videoiden signaalien yhteydessä. HDTV tukiajoitus: 1080P, 1080i,720P, 576P, 576i, 480P ja 480i.	
Page 20	SDTV/HDTV -skannausmuoto	SDTV/HDTV-skannausmuoto	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (HDMI)

AR

Page 7	مدخلات HDMI (تناظرية)	وصلة بينية ذات تعريف عال للوسائط المتعددة يوصل إلى الأجهزة ذات الإشارات الرقمية ويمكن إستخدامه مع الكمبيوتر الشخصى أو إشارات فيديو HDTV. يدعم توقيت HDTV،P1080، i1080 ، P720، P576، i576، P480، i480
Page 20	الموائمة	صيغة البحث في HDTV /SDTV

HDTV ،P1080 ،i1080 ، P720 ، P576 ، i576 ، P480 ،i480
640*480 @ 60Hz
800*600 @ 60Hz
1024*768 @ 60Hz
1360*768(لأجل HDMI)

ES

Page 7	Entrada HDMI (digital)	Interface Multimedia de Alta Definición Conecte a los dispositivos con señales digitales y puede ser usado con el PC o con las señales de vídeo HDTV. El HDTV soporta la temporización. 1080P, 1080i, 720P, 576i, 576P, 480P e 480i.	
Page 20	Compatibilidad	Formato de exploración SDTV/HDTV	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (para HDMI)

Upgrade notice in specification

IT

Page 7	HDMI in entrata (digitale)	Interfaccia multimediale ad alta definizione Connette agli apparati con segnali digitali e puó essere usato con I segnali video PC o HDTV. Sincronizzazioni supportate HDTV: 1080P, 1080i, 720P, 576i, 576P, 480P e 480i.	
Page 20	Compatibilita'	SFormato di ricerca SDTV/HDTV	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (per HDMI)

PT

Page 7	Entrada HDMI (digital)	Interface Multimédia de Alta Definição Liga a dispositivos com sinais digitais e pode ser utilizado com sinais de vídeo PC ou HDTV. Temporização de suporte HDTV: 1080P, 1080i, 720P, 576P, 576i, 480P e 480i.	
Page 20	Compatibilidade	Formato de procura de SDTV/HDTV	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (para HDMI)

GR

Page 7	Είσοδος HDMI (ψηφιακή)	Υψηλής ανάλυσης διεπαφή πολυμέσων Συνδέει με συσκευές με ψηφιακά σήματα και μπορεί να χρησιμοποιηθεί με τα τηλεοπτικά σήματα Η/Υ ή HDTV. Συγχρονισμός υποστήριξης HDTV: 1080P, 1080i, 720P, 576i, 576P, 480P και 480i	
Page 20	Συμβατότητα	Μορφή ανίχνευσης SDTV/HDTV	1080P,1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (για HDMI)

CZ

Page 7	HDMI vstup (digitální)	High Definition Multimedia Interface (multimediální rozhraní s vysokým rozlišením) Připojuje k zařízením s digitálními signály a lze jej použít s PC nebo HDTV video signály. Podpora časování HDTV: 1080P, 1080i, 720P, 576P, 576i, 480P a 480i.	
Page 20	Kompatibilita	Formát prohledávání SDTV/HDTV	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (pro HDMI)

PL

Page 7	Wejście HDMI (cyfrowe)	Interfejs High Definition Multimedia (Wysokiej jakości multimedia) Umożliwia podłączenie urządzeń przesyłających sygnał cyfrowy i korzystanie z sygnału video HDTV lub pochodzącego z komputera PC. Obsługiwane tryby HDTV: 1080P, 1080i, 720P, 576i, 576P, 480P, 480i.	
Page 20	Zgodność	Format skanowania SDTV/HDTV	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (dla HDMI)

Upgrade notice in specification

HU

Page 7	HDMI bemenet (digitális)	HDMI Digitális jelekkel csatlakozik berendezésekhez és használható PC vagy HDTV videó jelekkel. HDTV támogatott időzítés: 1080P, 1080i, 720P, 576i, 576P, 480P és 480i.	
Page 20	Kompatibilítás	SDTV/HDTV keresés	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (HDMI esetén)

SK

Page 7	HDMI vstup (digitálny)	High Definition Multimedia Interface (Multimediálne rozhranie s vysokým rozlíšením) Pripája k zariadeniam s digitálnymi signálmi a môže sa použiť s PC alebo HDTV video signálmi. HDTV podporované časovanie: 1080P, 1080i, 720P, 576P, 576i, 480P a 480i.	
Page 20	Kompatibilita	SDTV/HDTV formát skenovania	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (pre HDMI)

RO

Page 7	Intrare HDMI (digitală)	High Definition Multimedia Interface Conectare la dispozitive cu semnale digitale. Poate fi folosită cu semnale video PC sau HDTV. HDTV suportă următoarele moduri: 1080P, 1080i, 720P, 576i, 576P, 480P şi 480i.	
Page 20	Compatibilitate	Format scanare SDTV/HDTV	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (pentru HDMI)

RU

Page 7	Вход HDMI (цифровой)	Мультимедийный интерфейс высокого разрешения Разъем для подключения устройств с цифровым сигналом, может быть использован для подключения ПК или видеосигнала HDTV. HDTV поддерживает следующие разрешения:1080P, 1080i, 720P, 576P, 576i, 480P и 480i.	
Page 20	Совместимость	Формат развертки SDTV/HDTV	1080P, 1080i, 720P, 576P, 576i, 480P, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (для HDMI)

User's Manual

42” LCD TV

Table of Contents

Important Safety Instructions 02

Cautions 03

Descriptions and accessories 05

LCD TV installation & operation

Connectors and sockets 06

Control panel keys 09

Remote control functions 10

- Picture in picture 11
- Teletext 12

TV Menu

Using the advanced menu 13

- Display 13
- Advance 14
- Audio 15
- TV 16
- Setup 18

Using your Integrated Digital TV

Other information

Trouble-shooting 19

Specifications 20

English

WOW, SRS and symbol are trademarks of SRS Labs, Inc. WOW technology is incorporated under license from SRS Labs, Inc.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing and no objects fill with liquids, such as vases, shall be placed on the apparatus.
16. To reduce the risk of electric shock, do not remove the cover of the apparatus. Refer any servicing to appointed service personnel.
17. The readily operable appliance coupler will serve as the disconnecting device of this apparatus.
18. The apparatus must be connected to a mains socket outlet with a protected earthed connection.
19. Maintain a minimum of 10cm free space around the apparatus for proper ventilation.
20. Used or discharged batteries must be properly disposed of or recycled in compliance with all applicable laws. For detailed information, contact your local solid waste disposal authority.
21. When purchased or used in different countries, use an appropriate power cable which is compliant with local laws and regulations.
22. To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions
23. Do not install this equipment in a confined space such a book case or similar unit.
24. No naked flame sources, such as lighted candles,should be placed on the apparatus.

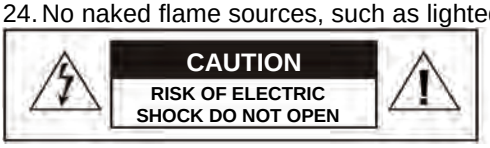

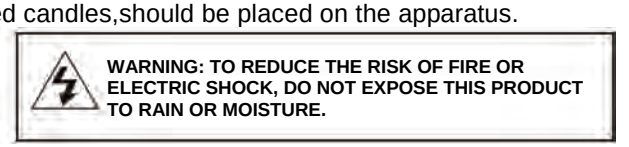

This symbol is used to indicate uninsulated "dangerous voltage" within the product's enclosure that may cause electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

"CAUTION"
These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Cautions

[Caution]
To protect your device from electrical damage, be sure to plug the cord into socket securely.

[Caution]
If you use the LCD TV with video games, computers, or similar products, keep brightness and contrast at a low level. Images with high level brightness or contrast may "burn on" the screen permanently..

[Tips for cleaning the LCD TV]

1. Wipe the LCD TV with soft or dry cloth.
2. DO NOT use solvent or methyl benzene. Harsh chemicals may damage your LCD TV.
3. Make sure the LCD TV is unplugged before you clean it.
4. This equipment is for entertainment use only.
5. Visual display tasks are excluded.

[CATV]

Be sure to acquire due authorization from the broadcaster/CATV service provider/program owner before using the TV receiver to watch programs through UHF, VHF, or CATV.

[Installation and use of LCD TV]

1. Check the LCD TV power specification shown on the serial no./model tag. Be sure to use the power according to the specification. If you are unsure about the power requirement, please contact your distributor or local power company.
2. Make sure to plug into the poser cable into the socket securely. If you have problems plugging in, please contact your distributor.

The plug is designed in such a manner that you can plug into a socket in a certain direction. If you have problems with the plug, contact with your distributor.

1. DO NOT overload power sockets or extension cords. Overloading poses a risk of electric shock or fire.
2. DO NOT place any objects on the power cord. Keep your LCD TV away from any place that might cause damage to the LCD TV. Use only the correct power cord.
3. Switch off your LCD TV when it is not in use, If the LCD TV will not be in use for a long time, unplug it to prevent the risk of fire.
4. The vent on the rear of the LCD TV is designed for ventilation and heat dissipation. Keep the vent clear.
5. DO NOT place the LCD TV on beds, sofas, or carpet, as this may block the vent.
6. DO NOT place the LCD TV in enclosed spaces, such as a on a bookshelf or in a TV cabinet as this may block the vent.
7. Keep the LCD TV away from high-temperature or heat-generating objects.
8. Keep the LCD TV away from direct sunlight.
9. DO NOT place the LCD TV on an unstable shelf or desk. Failing to do so may result in injury.
10. DO NOT allow foreign objects inside the LCD TV, as this poses a risk of electric shock or damage to the internal components.
11. When transporting the LCD TV, do not carry it by holding onto the speakers. Be sure to always carry the TV with two people holding it with both hands.

Cautions

[Maintenance]
If any of following occurs, unplug the LCD TV and contact your distributor or qualified technician to repair the LCD TV :
1. The power cord or plug is damaged.
2. Liquid enters the LCD TV.
3. LCD TV is damp or wet.
4. LCD TV is damaged.
5. LCD TV malfunctions.

DO NOT attempt to repair the LCD TV by yourself. There are high voltages inside the cabinet which poses a risk of electric shock.

Changing parts
If the LCD TV requires new parts, ask for written proof of these required parts from the appointed technician.
Safety inspection
After the LCD TV is repaired, remember to ask the technician to conduct a routine safety inspection (based on the manufacturer's requirements) to make sure the LCD TV is safe.
If the LCD TV has been used longer than its life, please contact qualified technician for repair.

[User's record]
You can find the serial no. and model tag on the back of the LCD TV. Do provide the serial no. when you contacting the distributor or appointed service personnel.

Please read and comply with all warnings and instructions in the manual . Failing to do so may void the warranty. Modifying the LCD TV in any unauthorised manner will void the warranty immediately.

FCC Compliance Statement
This device complies with Part 15 of the Federal Communications Commission (FCC) Rules.. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on the user is encouraged to try to correct the interference by one or more of the following measures:
* Reorient or relocate the receiving antenna
* Increase the separation between the equipment and receiver
* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

Caution: To comply with the limits for an FCC Class B computing device, always use the signal cord and power cord supplied with this unit. The FCC warns that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

European Notice
Products with the CE Marking comply with both the EMC Directive (89/336/EEC), (93/68/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community.

Descriptions and accessories

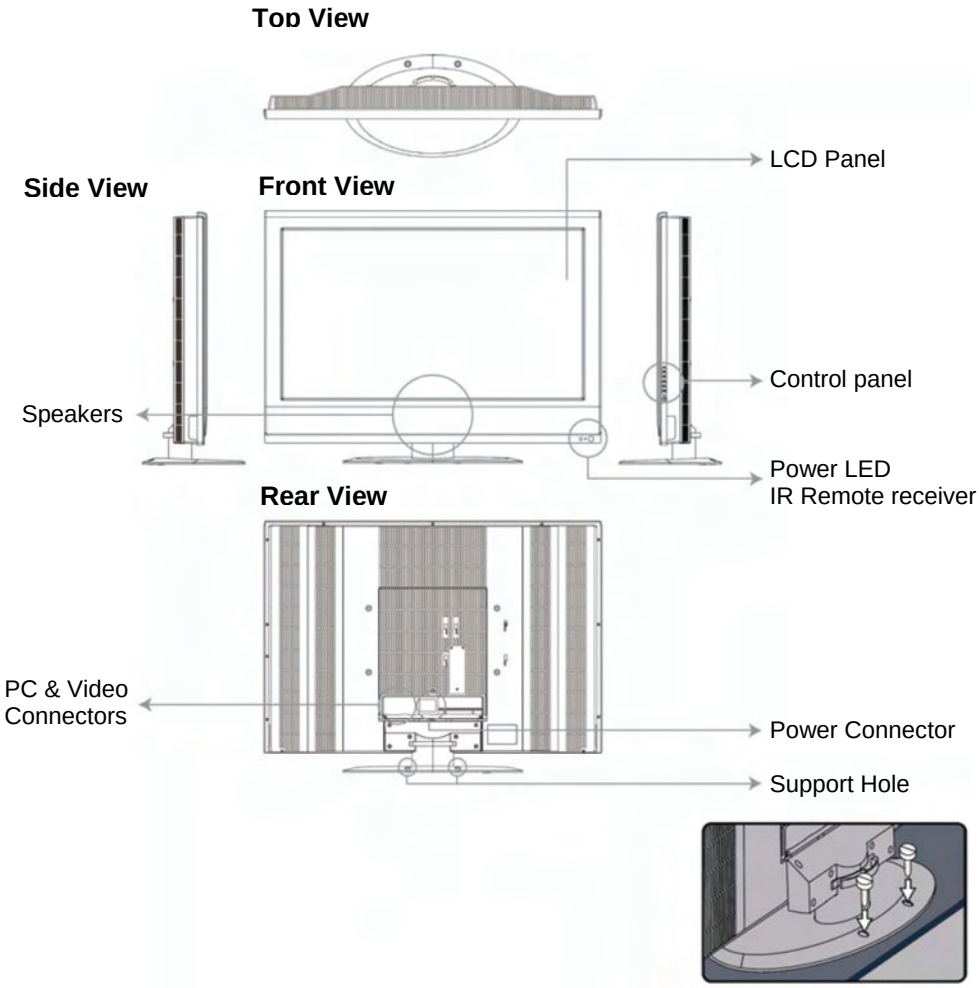

SCREW SIZE:T4x12
P.S. Before operation, the auxiliary screw should be installed on the stationary table.

Accessories

1. Power cord (USA, England or Europe)
   For Europe: A VDE certified power supply cord has to be used with this equipment for Germany. The power cord rated 250V, 10A minimum, according to IEC 60227, H05VV-F or VW-1, 0.75 mm^2 x 3G should be used.
   For USA: NEMA 5-15P, Type SVT or SPT-2, 18 AWG, min. 7A/125V, 3G.
2. Remote control
3. AAA battery X 2

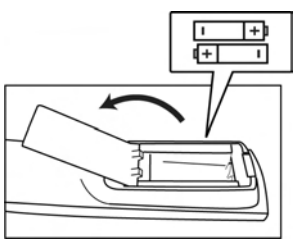

Installation of batteries

1. Insert two AAA batteries into the Remote control.
   Make sure + and - are facing the proper direction.
2. Replace the cover.

If the remote control will not to be used for a long time, remove the batteries.
Use the remote control carefully. Do not drop the remote control on the floor.
Keep it away from moisture, direct sunlight, and high temperatures.

AV and Antenna input Connection

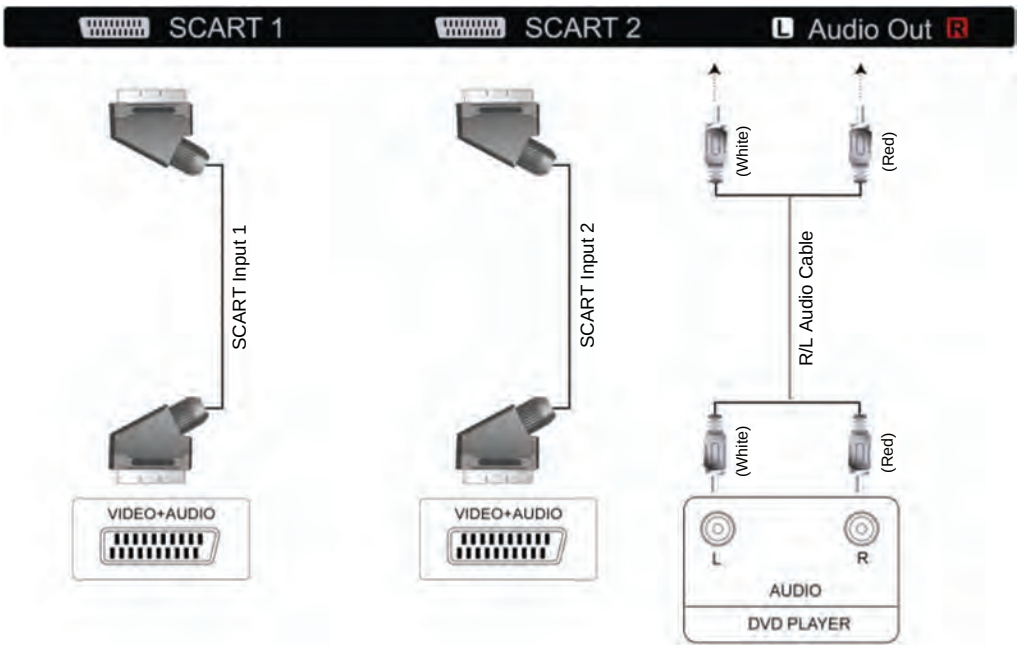

Port	Functions
Scart 1	A connector for Europe, which uses the same connector to transmit AV, SRGB and Audio input signals; TV and Audio out signals.
Scart 2	A connector for Europe, which uses the same connector to transmit AV, SRGB,S and Audio input signals; by main screen(TV, AV, Scart1/AV) and Audio out signals.
Tuner Input	Connects to TV RF signals (antenna/CATV).
AV R/L Audio Output	Connects to composite video and audio signal (R/L) Line out.

PC & Video Input Connection

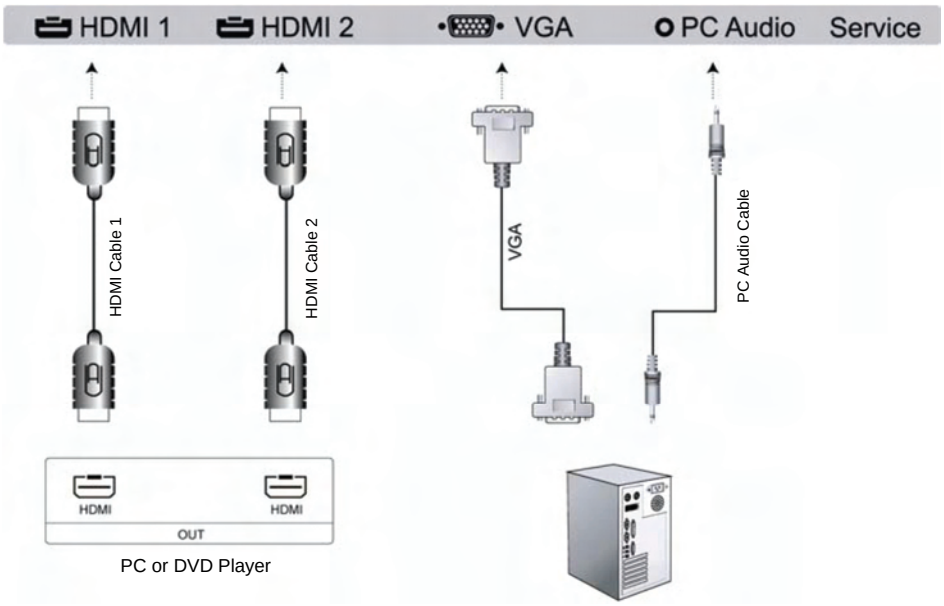

Port	Functions
VGA Input (analog) and Audio input	Connects to VGA analog signals sources.PC audio supports 3.5mm Jack.
HDMI Input (digital)	High Definition Multimedia Interface Connects to devices with digitals signals and can be used with PC or HDTV video signals. HDTV support timing: 1080i,720P,576i,576P,480i and 480P.

Power Connection

Attach the AC power cord to the LCD-TV and plug into an appropriate wall outlet.
Turn the power on at the main switch (Next to the power socket) to put the LCD TV into standby mode. The standby indicator on the front will light up in red.

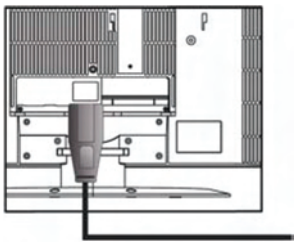

AC 100~240V

Power outlets differ from region to region.

Turning the LCD TV on

Press the **POWER** button on the front lower right of the TV to turn on the power or enter standby mode.

> Due to unstable local voltage, there will occasionally be a delay in POWER ON when the LCD TV is switched on.

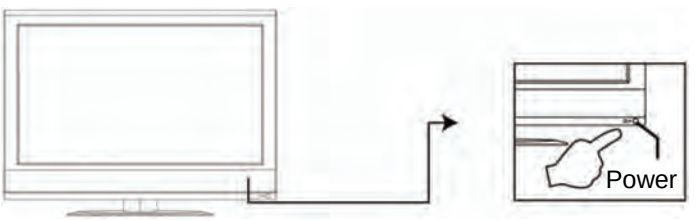

Power indicator Status
Green -- Power on
Red ---- Standby.

Programming TV channels

1. Press the **SOURCE** button on the remote control or on the control panel of LCD TV to select **Anglog TV** mode.
2. Press the **MENU** button on the remote control to display the OSD menu.
3. Press the ▶ button on the remote to highlight **TV (start to Programming TV channels)** and press the ▼ button to select your **Country** first
4. Press the ▼ button on your remote to highlight **frequency Scan (channel scan)** and press the ▶ button to start scanning : Auto Program Sort to start the tuning process.
   (This will take a few minutes. The tuning process will find all available channels.)
5. You can watch TV now. Change channels by pressing the P^ and P⌄ buttons.

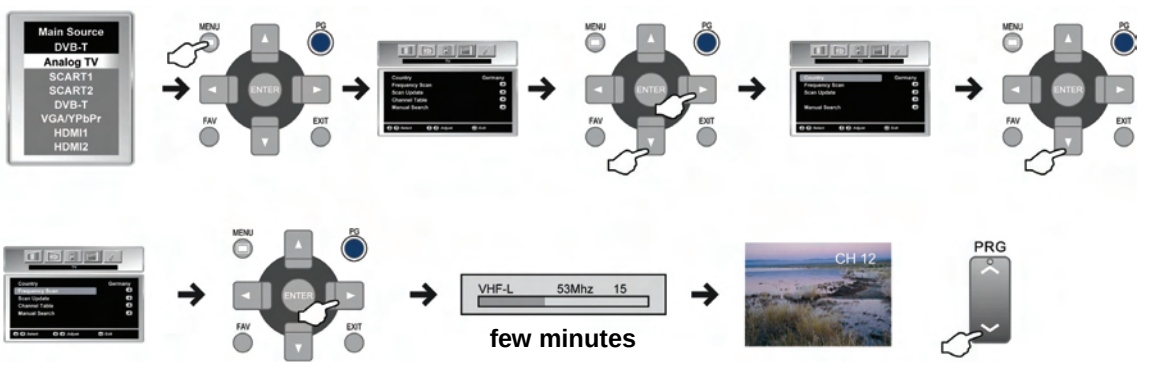

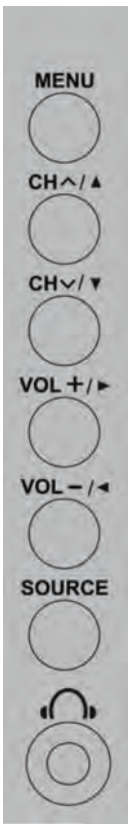

Button	Description
MENU	Use this button to display and adjust the features in the On-Screen Display(OSD). Use the four arrow keys (channel and volume adjustments) to navigate the menu options.
CHANNEL ^/v (FUNCTION▲/▼)	Use these buttons to switch between preprogrammed channels. In OSD mode,use those two bottoms to switch the selection up and down.
VOLUME **+/ -** (ADJUST ◀/▶)	Use these two buttons to adjust the volume. In OSD mode,use those two bottoms to switch the selection left and right.
SOURCE	Use this button to change between video input signals.
Earphone Output	Connects to headphones (16Ω or 32Ω).

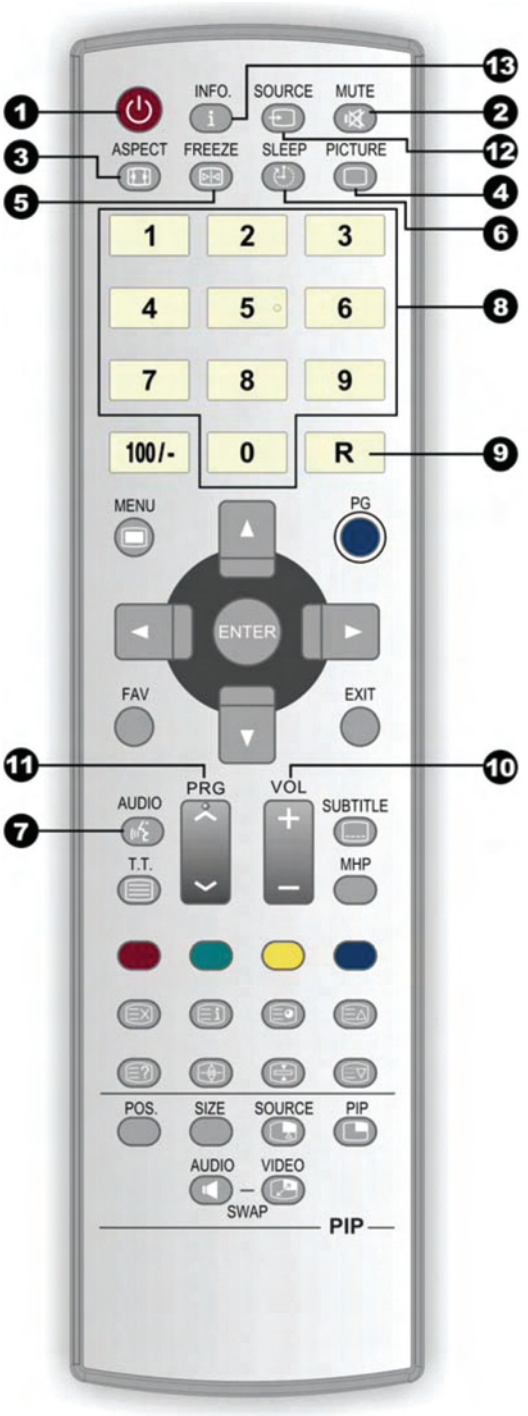

1. **POWER**
   Press to turn on the LCD TV or enter standby mode.
2. **MUTE**
   Press to toggle audio on and off. You can also press volume +/- to restore the previous volume level.
3. **ASPECT** (screen scaling)
   Changes the aspect ratio. Choose from
   Full / Zoom1 / Zoom2 / Panoramic / Auto / Normal
4. **PICTURE**
   Selects advanced picture settings.
   User / Vivid / Movie / Game / Sport
5. **FREEZE**
   Press to freeze the picture. Press again to revert to live viewing.
6. **SLEEP**
   Press repeatedly to select one of the available sleep (OFF/15/30/60/90/120 minutes)modes.
7. **AUDIO**
   Selects STEREO, MONO, DUAL 1 and DUAL 2. If there is no second language available, the LCD TV will select audio output as mono.
8. **0~9**
   Press 0~9 to select channels directly
9. **RETURN**
   Returns to the previous channel.
10. **VOLUME +/-**
    Adjusts the LCD TV volume.
11. **PROGRAM** ∧∨
    Selects the Channel
12. **SOURCE**
    Switches between signal sources.
    a. Press the ”SOURCE” bottom you can see the selection
    b. Use the ▲▼◀▶ keys to switch the slections
    c. Press the ▶ bottom to confirm your choice.
    d. Press the **MENU** again to quit the picture.

13. **INFORMATION (i)**
    Press the INFORMATION button to display the current signal status, including input source/channel/audio mode.

14.MENU ▲▼◀ ▶

Press MENU to activate the LCD TV OSD. Press again to close the OSD. Press ▲▼◀ ▶ to navigate and confirm your selection.

PIP (Picture in picture)----------

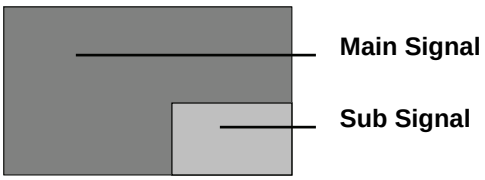

15. PIP

PIP On/Off. Press to activate Picture In Picture (PIP) mode. Two screen sizes are available. Press again to close PIP mode.

16. PIP-POSITION (position of sub picture)

Changes the position of the sub picture under PIP mode.

17. PIP SOURCE

Press to select the sub picture's signal source.

18. PIP-SIZE (size of sub picture)

Press to changes the size of sub picture under PIP mode.

19. VIDEO SWAP

Press to swap the source of main and sub pictures.

20. AUDIO SWAP

Select the audio speaker out in PIP mode.

NOTE: The Sub-signal options change as the main signal source change.

		MAIN PICTURE										
		TV	YPbPr	HDMI 1	HDMI 2	VGA	SCART1 -CVBS	SCART1-S	SCART1 -RGB	SCART2- CVBS	SCART2-S	SCART2 -RGB
SUB PICTURE	TV	×	×	O	O	×	×	×	×	×	×	×
	YPbPr	×	×	O	O	×	×	×	×	×	×	×
	HDMI 1	O	O	×	×	O	O	O	O	O	O	O
	HDMI 2	O	O	×	×	O	O	O	O	O	O	O
	VGA	×	×	O	O	×	×	×	×	×	×	×
	SCART1 -CVBS	×	×	O	O	×	×	×	×	×	×	×
	SCART1-S	×	×	O	O	×	×	×	×	×	×	×
	SCART1 -RGB	×	×	O	O	×	×	×	×	×	×	×
	SCART2- CVBS	×	×	O	O	×	×	×	×	×	×	×
	SCART2-S	×	×	O	O	×	×	×	×	×	×	×
	SCART2-RGB	×	×	O	O	×	×	×	×	×	×	×

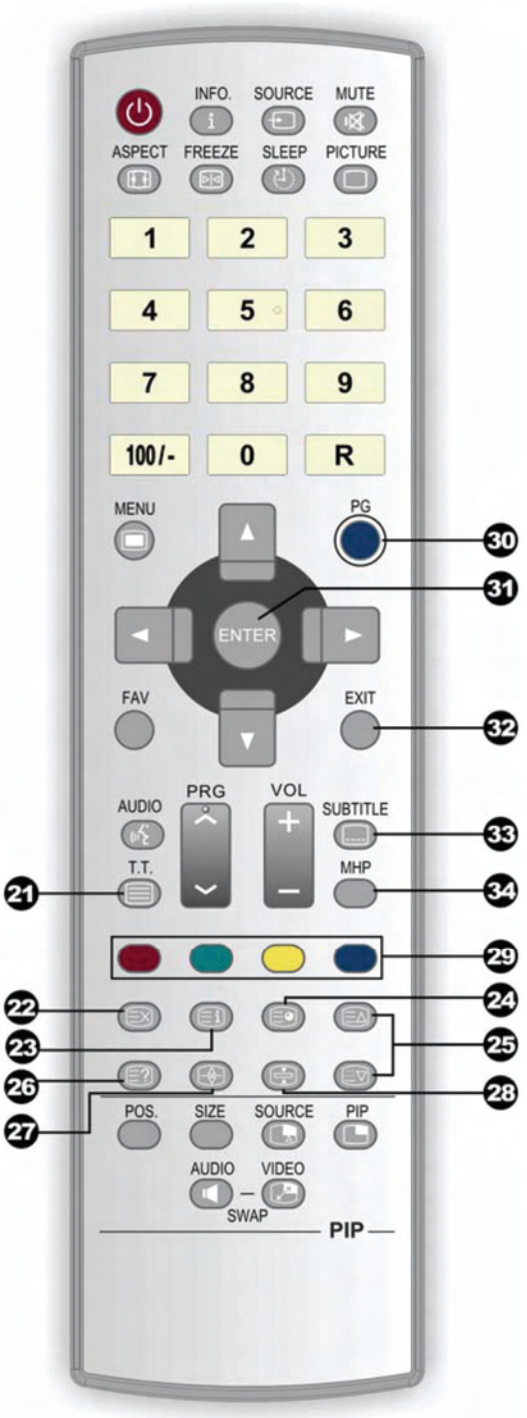

TELETEXT----------
(Designed for Europe PAL/SECAM system only)

21. TEXT/MIX
Press this button to activate Teletext. Press again to activate Teletext with TV .Press again to turn off Teletext.

22. UPDATE
Enter the page number then press the (UPDATE) button and the teletext will display the page you selected after searching. The page number is displayed at the top side of screen.

23. INDEX
Press this button to return to page 100 or the index page; and then press 0 to 9. The teletext page will be numbered and added to the page you select or the secondary item.

24. SUB
Displays the sub page (when available).

25. PAGE UP& DOWN
Press this button then the number keys to select the page you want view.

26. REVEAL
Reveals hidden information such as answers to a quiz.

27. SIZE
Press this button to change the font size: Full screen, Top half and Bottom half.

- FULL(full screen)	standard full-screen text
- TOP(top half)	top half of page appears on the full screen
- BOTTOM(bottom half)	bottom half of page appears on the full screen.

28. HOLD
Press this button to stop the scrolling of pages. The text decoder stops receiving data.

29. R/G/Y/B
Press this button to select the pictures with various colors of text. Different channels display different functions.

Specical Keys for DVB/T ----------
(Not available without DVB-T model)

30. PG
Opens the Programme Guide.

31. ENTER
Confirms choices in menus.

32. EXIT
Clears on-screen information or closes an open menu.

33. SUBTITLE
Opens the Subtitles menu.

34. MHP
MHP Function awake.

TV menu Using the advanced menu

1. Press the **MENU** button on the top of the LCD TV or press the **MENU** key on the remote control.
2. Press the ◀▶ buttons to highlight the menu entries.
3. Press the ▼ button to enter the submenu.
4. Press the ▲▼ buttons to highlight the item to be adjusted.
5. Press ◀▶ to adjust the setting.
6. Press the **MENU** again to quit the picture.

NOTE: Items in gray can not be selected and adjusted.

DISPLAY

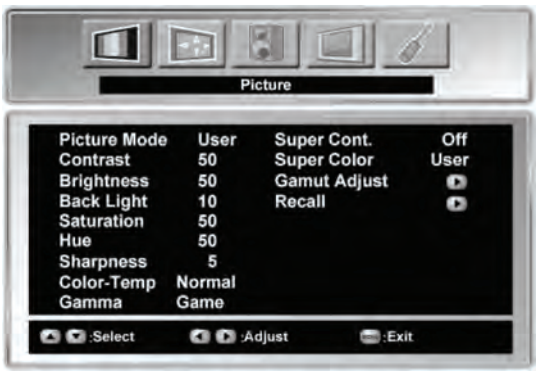

	Menu	Descriptions
	Picture Mode	Press ◀▶ to select the advanced picture setting. User / Vivid / Movie / Game / Sport
	Contrast	Press ◀▶ to increase or decrease the picture contrast. The adjustment range is 0~100
	Brightness	Press ◀▶ to make the picture brighter or darker. The adjustment range is 0~100
	Back Light	Press the ◀▶ buttons to make the BackLight brighter or darker. The adjustment range is 0~10
*	Saturation	Press ◀▶ to adjust color saturation. The adjustment range is 0~100
*	Hue	Press ◀▶ to change the hue to make it redder or greener. The adjustment range is 0~100
	Sharpness	Press ◀▶ to make the picture sharper or softer. The adjustment range is 0~10
	Color-Temp.	Press ◀▶ to adjust the color temperature. Cool / Warm / Normal
	Gamma	Press ◀▶ to select Gamma mode Normal / HDTV / Game
*	Super Cont.	Press ◀▶ to select Super Contrast mode Off / Mode1 / Mode2 / Mode3
*	Super Color	Press ◀▶ to select Super Color mode User / Mode1 / Mode2 / Mode3
*	Gamut Adjust	Press ◀▶ to adjust detail Gamut value
	Recall	Press ▶ to restore all Display parameters to their default settings.

* Only available in some particular source modes.

ADVANCE

Menu	Descriptions
Aspect	Press the ◀▶ buttons to changes the aspect ratio. Full / Zoom1 / Zoom2 / Panoramic / Auto / Normal * PC (VGA) available Full/Normal only
H-Position	Press the ◀▶ buttons to adjust the horizontal VGA position. The adjustment range is 0~100
V-Position	Press the ◀▶ buttons to adjust the vertical VGA position. The adjustment range is 0~100
Phase	Press the ◀▶ buttons to adjust the focus and sharpness of VGA. The adjustment range is 0~100. in PC(VGA)/YPbPr model, if the picture quality fails to meet your maximum expectation when “Auto” is pressed, please adjust the “Phase” function to do manual calibration for refining picture quality.
Frequency	Adjustment freguency value
Auto Adjust	Auto Adjust Function

Either in PC(VGA)/ YPbPr model, if the picture quality fails to meet your maximum expectation when “Auto” is pressed, please adjust the “Phase” function to do manual calibration for refining picture qualit

AUDIO

	Menu	Descriptions
	Audio Mode	Press the ◀▶ buttons to select the sound mode. Mono / SAP / Stereo
*	Bass	Press the ◀▶ buttons to increase or decrease the audio bass level.
*	Treble	Press the ◀▶ buttons to increase or decrease the audio treble level.
*	Balance	Press the ◀▶ buttons to adjust the balance between right and left speakers.
	WOW 3D	WOW 3D ON/ OFF selection

* Only available in some particular source modes.

TV menu Using the advanced menu

TV (for TV)

Menu	Descriptions
Country	Press the ◀▶ buttons to select your country.
Frequency Scan	To search the local channel automatically,you can execute the auto program(APS)function Press the ▶ button to execute automatic channel scanning. Automatic channel scanning must be executed when you install your LCD TV for the first time.
Scan Update	Use Scan Update function can scan the programs again after APS and keeps the program list arrangement as you designed before,the additional program lists after the existing program table.
Channel Table	This option provides channel edition on sequence, channel skip and frequency fine tuning in the range of 3MHz. (Refer to next page for details)
Manual Search	Use Manual Search function can fine tuning the programs again after APS and keeps the program.

TV (for TV)

Channel Table:

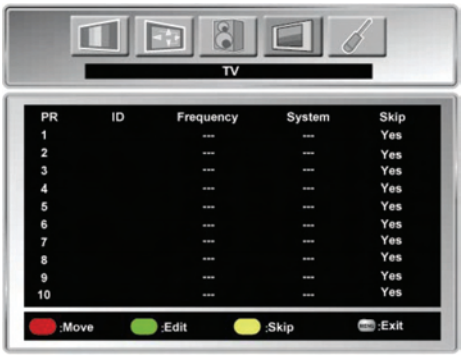

After running the Auto Program Sort .you can get the local program table.
Use the ▲▼ buttons on the remote control to highlight the button to edit in yellow, and then press the ▶ button on the remote control to enter the Tuning table.

Swap program No :Use the ◀▶ buttons to choose which channel to change from channel 0 to 99.

Edit Name : Use the into edit channel name
Use the ▲▼ keys to edit name Press the "MENU" button to confirm the name setting.
Press the ▲▼ buttons to select your required letters:
cycle through A,B,C…a,b.c…0,1,2,3…then _,@,#"$..., etc.

Color Norm & System Norm :
Use the ◀▶ buttons to choose which TV system to represent the screen.
If you live in an area which can receive different TV systems you may choose to change the default system to the system used in your area.

- Blue Color Norm: change the default system to the system used in your area.
  cycle through PAL-I → PAL-D/K→ PAL-B/G→
  SECAM-L → SECAM-D/K →SECAM-B/G
- Red Color Norm: change name selection
- Green Color Norm: Edit name selection
- Yellow Color Norm: Skip “ON” means (skip on) and “OFF” means (skip off).

Fine Tuning : Manually adjust the frequency for variation of each channels to get a better image quality, but it will be fixed the frequency after adjustment unless re-update scan.

SETUP

Menu	Descriptions
Language	Press the ◀▶ buttons to select language.
Sleep	Press the ◀▶ buttons to select one of the available sleep OFF/15/30/60/90/120 minutes
Recall	Press ▶ to return all system parameters to their default settings.

Other Information Trouble-shooting

The following table contains the common problems and the solutions to these problems.
Please check this list before you contact technicians.

Problems	Reasons	Solutions
No picture	1. Did you connect the power cord ? 2. Did you turn on the power ? 3. Is the signal cable connected correctly ? 4. Is the screen in energy-saving mode ?	1. Connect power cord correctly. 2. Turn on power. 3. Connect signal cable correctly 4. Press any button on the computer.
Abnormal colors	1. Is signal cable connected correctly ?	1. Connect signal cable correctly.
Twisted picture	1. Is the signal cable connected correctly ? 2. Is input signal of compatible frequency ?	1. Connect signal cable correctly. 2. Please use compatible signal.
Picture too dark	1. Are brightness and contrast set at the lowest level ?	1. Adjust brightness and contrast.
Audio only, no images	1. Is input signal connected correctly ? 2. Is TV signal too weak ?	1. Please check if input signal is connected correctly. 2. TV-RF signal must not be lower than 50dB.
Picture only, no audio	1. Is signal cable connected correctly ? 2. Is volume at the minimum level ? 3. Is audio signal cable not connected ? 4. Is TV signal too weak ?	1. Connect signal cable correctly. 2. Adjust volume to proper level. 3. Connect audio signal cable correctly. 4. TV-RF signal must not be lower than 50dB.
Cannot use remote control	1. Is the battery dead? 2. Is there any disturbance from static or thunder ?	1. Please change battery. 2. Turn off power for 10 seconds; and then restart power.

The following table contains common problems and solutions to these problems.

Problems	Possible solutions
Cannot receive sufficient channels through antenna	Please use the automatic scanning function to increase the number of channels not included in memory (Please refer to page 16)
No colors	Please adjust the color setup
Blinking picture accompanied by ghost image	Check the connection of antenna/signal cable. Check if channel is in play mode Press signal source and change input mode
Broken lines or segments	Adjust antenna Keep the TV away from noise sources, such as automobiles, neon lights, and hair dryers
Certain TV channels are blocked (Hope to acquire some channels)	Please use the automatic scanning method to add the channels not included in memory (Please check page 16)
Overlapping images or ghost images	Please use multi-directional outdoor antenna (If your TV is subject to the influence of nearby mountains or buildings)
Cannot use a function	If the item you choose turns gray, that item cannot be selected.
Cannot receive programs	Please use the automatic scanning method to add the channels not included in memory (Please check page 16)

If you have further questions after reading the above descriptions, please contact your distributor.

Display panel	Active Area / Screen Size	42” TFT LCD
	Aspect Ratio	Widescreen 16:9
	Max. of Pixels	1920(H) X 1080(V)
	Lamp Life of Backlight	60,000 hrs (Typical)
Compatibility	PC	XGA (1024x768@60; 70; 75Hz) SVGA (800x600@60; 72; 75Hz) VGA (640x480@60; 72; 75Hz) 720*400@70Hz
	SDTV/HDTV scanning format	1080i, 720p, 576p, 576i, 480p, 480i 640*480@60Hz 800*600@60Hz 1024*768@60Hz 1360*768 (for HDMI)
Power	Input Voltage	AC100-240V, 50/60Hz
	Operation	＜300 W
	Standby	<1 W
Environment	Operating	5°C ~ 35°C (41°F ~ 95°F) / 10% ~ 90% (no condensation) (Panel Range 0°C to 50°C/ 10% ~ 90% (no condensation))
	Storage temperature	-20 ~ 60°C (-4~140°F) / 10 %~90 % (no condensation)
Other	Built-in speaker	8 Ω.15Wx2